


Fire Screen

Our Fireplace Screen fits close against most fireplaces to prevent sparks from jumping out. Use an adjustable wrench and allen wrench to connect the Feet to each side and the Stabilizer Bracket to the lower back of the Screen. Predrilled holes and hardware are provided. For safety, never leave a fire unattended.

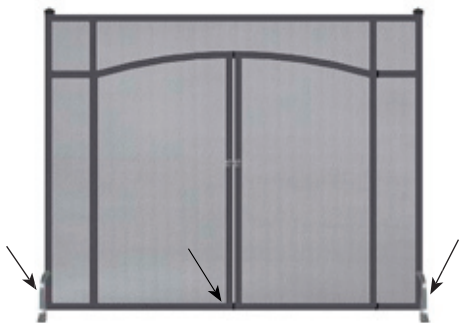

Connect the Feet to each side of the Screen and the Stabilizer Bracket at the lower back.

GARDENERS
SUPPLY COMPANY

800-427-3363 • www.gardeners.com