


## Leaf Fire Screen

Our decorative Fire Screen fits close against most fireplaces to prevent sparks from jumping out. Use an adjustable wrench and allen wrench to connect the Feet to each side and the Stabilizer Bracket to the lower back of the Screen. Predrilled holes and hardware are provided. For safety, never leave a fire unattended.

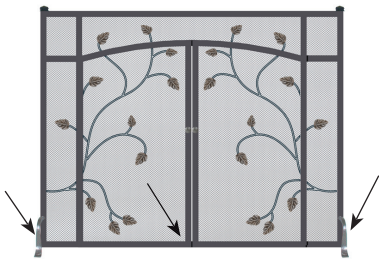

*Connect the Feet to each side  
of the Screen and the Stabilizer  
Bracket at the lower back.*

**GARDENERS**  
SUPPLY COMPANY

800-427-3363 • [www.gardeners.com](http://www.gardeners.com)