

## Flower Rain Gauge

This rain gauge uses a natural cork float to measure up to 4 inches of rainfall. The Rain Gauge should be installed in an open area where rainfall will not be obstructed by a structure or overhead foliage. It should also be located away from children's play areas.

### Assembly Instructions

1. Thread the bee wire through the center of the wire mesh.
2. Attach the end of the bee wire to the center of the cork top.
3. Feed the cork and wire into the glass tube.
4. Place assembly in the middle of the flower, centering wire mesh on top of the flower.
5. Adjust the wire mesh to keep it from covering the drain holes around the glass tube.

### Reading the Rain Gauge

The amount of rainfall is measured in half inch increments. Each full inch is indicated by the numbers 1,2,3,4 and 5.

**GARDENERS**  
SUPPLY COMPANY

800-427-3363 • [www.gardeners.com](http://www.gardeners.com)

#37-275