




Read all instructions BEFORE
assembly and USE of product.
KEEP INSTRUCTIONS FOR
FUTURE USE.

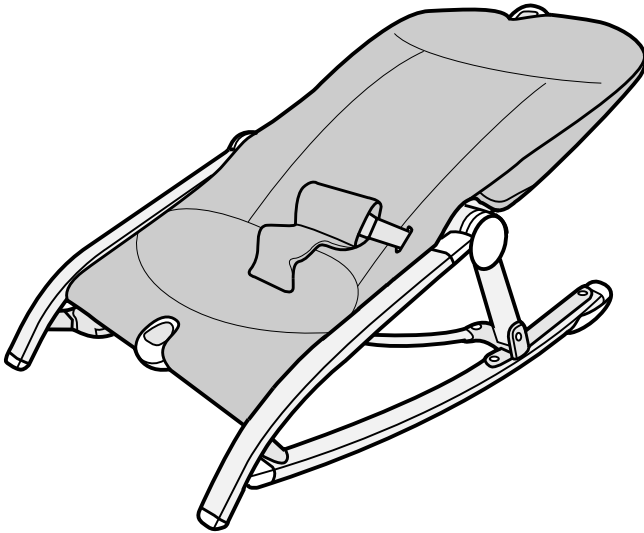

Pocket Relax

Quick-Fold Infant Rocker

Owner's Manual

! WARNING:



**Prevent serious injury or death:
Failure to follow these warnings and the instructions could result in serious injury or death**

- Never leave your child unattended.
 - This product and all its components must be assembled by adults only.
 - Age of permitted use: From birth to 20 lbs (9 kg) approximate 6 months old.
 - Do not use the Rocker once your child can roll over or sit unaided.
 - Always use the restraint system.
 - This product is not intended for unsupervised or prolonged periods of sleep.
 - Never use for a child able to sit up unassisted.
 - **Fall Hazard:** Child's activity may move Rocker. Use only on floor. Never use on any elevated surface.
 - **Suffocation Hazard:** Never use on a soft surface (bed, crib, sofa, cushion), as seat may tip over and cause suffocation.
 - Do not use the Rocker if any components are broken or missing.
 - Make sure that the seat cover is always fitted correctly on the Rocker frame.
 - Do not carry the Rocker with child in it.
 - Periodically check for worn parts, loose screws, worn or frayed fabrics and immediately replace any damaged parts.
 - Do not allow children to play unsupervised near the Rocker.
- Strangulation Hazard:**
- Do not place the rocker near windows or other objects where strings, curtains or other items with cords could become entangled with the child.
 - To prevent the risk of fire, never place the Rocker near electrical appliances, gas cookers or other sources of intense heat.
 - Do not use accessories or replacement parts other than those approved by the Chicco.

How to Assemble the Rocker


1

1. Unzip the Travel Bag and remove the Pocket Relax.

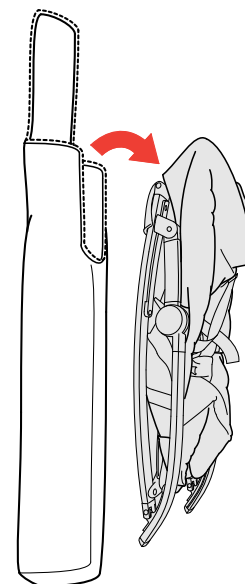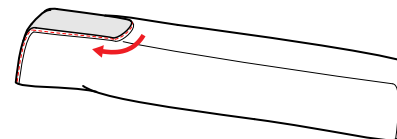

How to Assemble the Rocker


2A

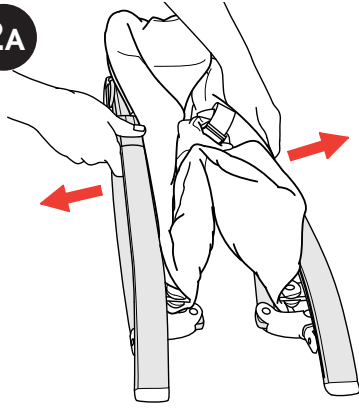



2A. Pull the Side legs of the Pocket Relax apart.

2B. Locate the Locking Buttons at the top and bottom of the Seat. Pull out on both until they click into position, as shown.

Back View

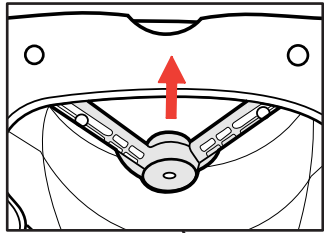

2B

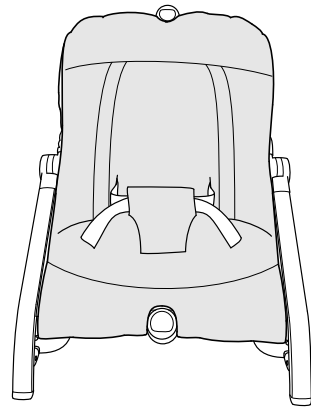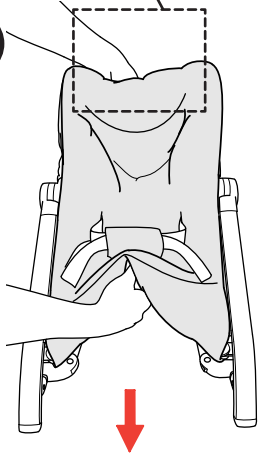


How to use the Rocker


⚠ WARNING

Avoid serious injury from falls or sliding out. Always use restraints.

3

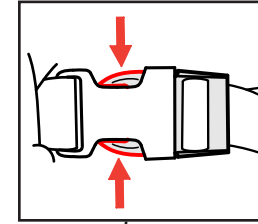


3. To unbuckle the waist belt, pull back on the crotch padding to expose the latch buttons. Squeeze both latch buttons together to release the waist belt. Repeat for other side.

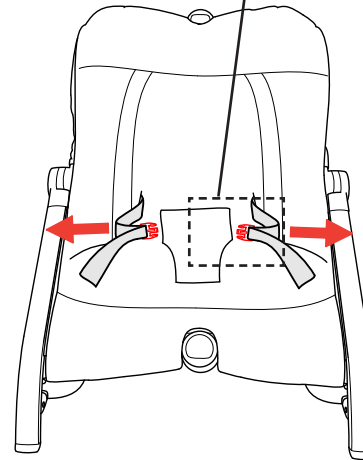


How to use the Rocker

4A

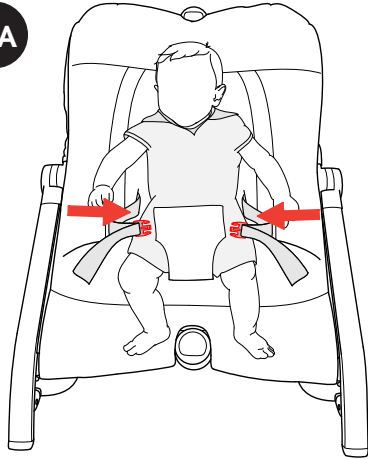


4A. Always fasten the harness restraint straps as shown. For your child's safety, make sure that both straps are secured.

4B

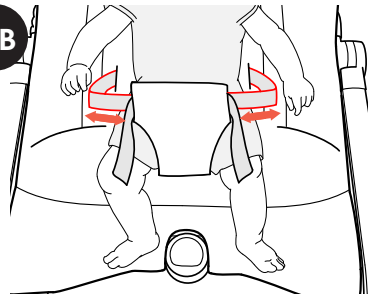

4B. Adjust harness straps to get a snug fit around your child. The length of the waist belt straps can be adjusted. Pull on the ends of the straps to tighten or loosen, to better fit your child.

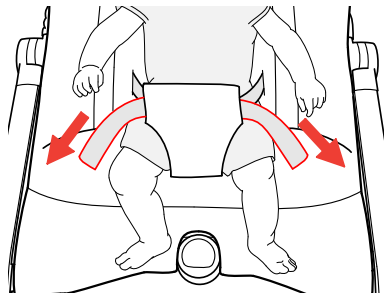


How to use the Rocker



⚠ WARNING

Do not make adjustments to the seat height when the baby is seated in this product.

5

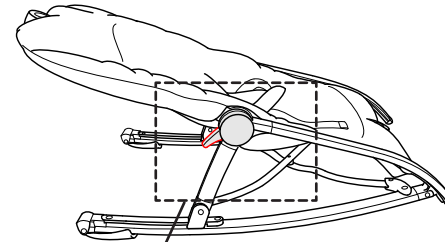


5. To raise the backrest on the Pocket Relax, squeeze the levers on both sides, while rotating the backrest up and forward, as shown.

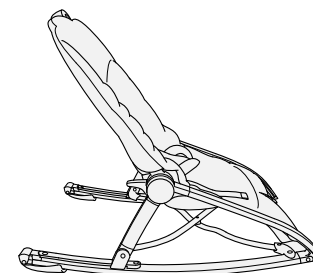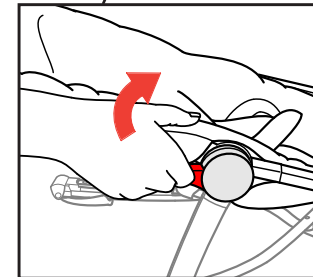


How to use the Rocker

6

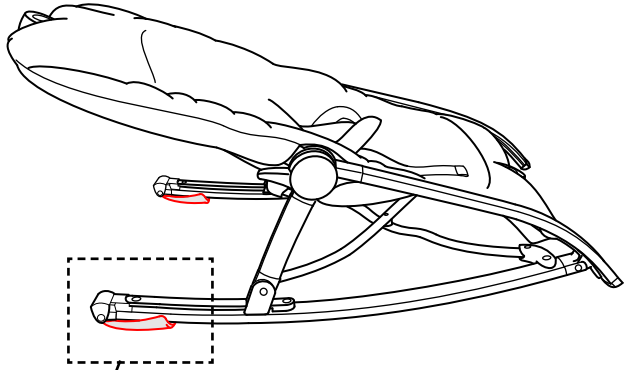


6. Flip down both Rear Stationary Legs as shown, to make the Pocket Relax stationary.

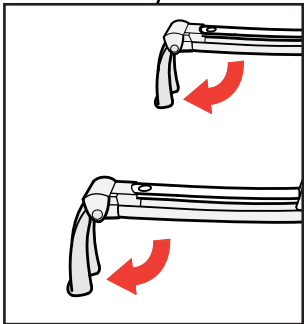


How to use the Rocker

7A

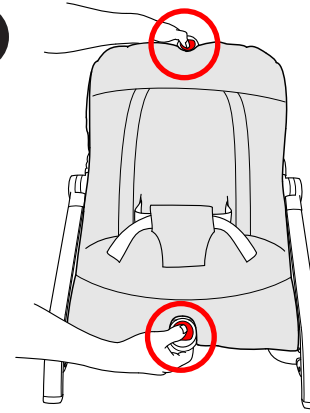


7A. To fold the Pocket Relax, push in on the headrest locking button and the footrest locking button at the same time while pushing the Pocket Relax together.

7B. Push both side legs together, as shown. Store the Pocket Relax in the travel bag.

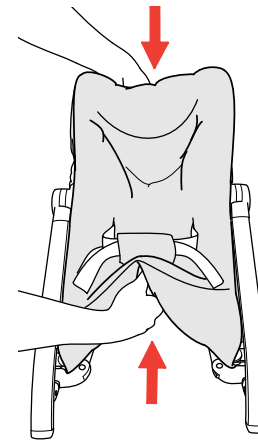


7B

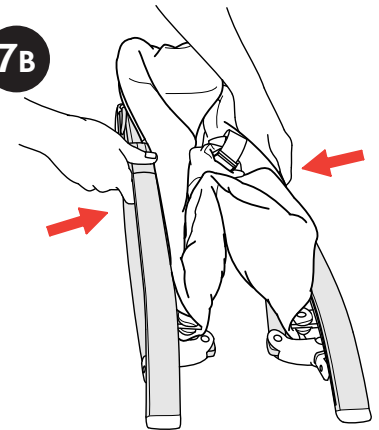

How to remove the fabric

8A

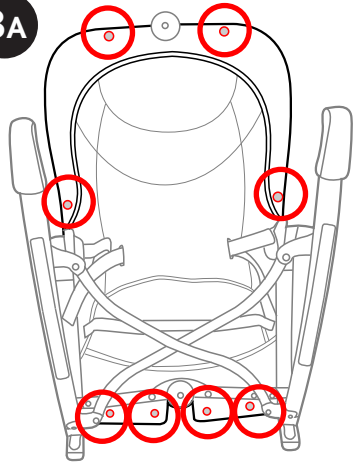


8A. To remove the fabric, flip the seat over and undo 8 snap buttons located on the back, as shown.

Flip the Pocket Relax right side up and release the headrest and footrest locking button, see Step 7A.


8B. Unbuckle the waist belt and slide straps through the openings.

8B

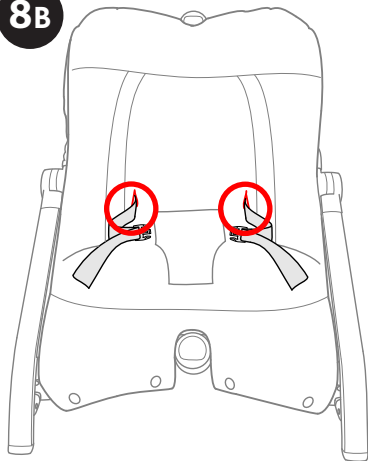


How to remove the fabric

9

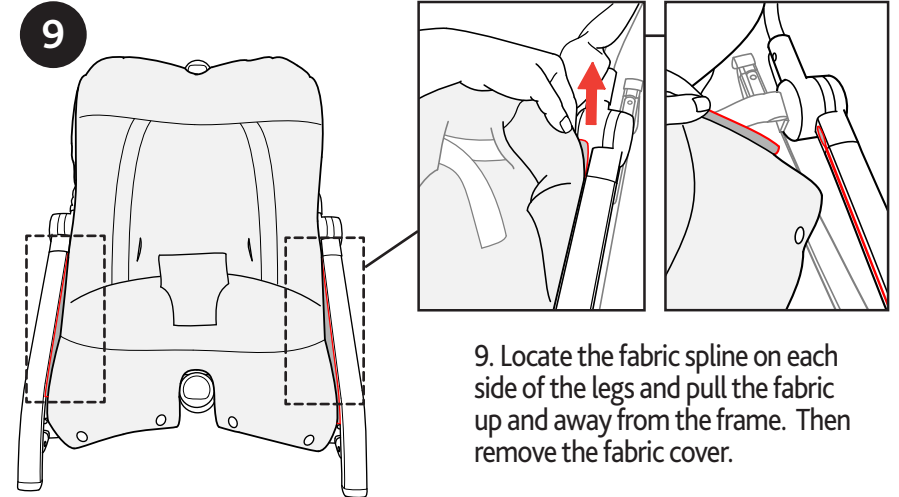

9. Locate the fabric spline on each side of the legs and pull the fabric up and away from the frame. Then remove the fabric cover.

To re-attach the fabric follow steps 8-9 in reverse.

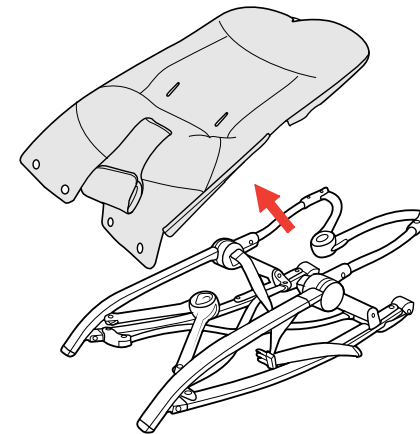

Cleaning and Maintenance

The cleaning and maintenance of the Rocker must only be carried out by an adult.

CLEANING

The fabric seat can be removed (please refer to the steps 8-9).

Please refer to the care labels for instructions on how to clean the fabric seat.

It is recommended to periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the Rocker has come into contact with water. Plastic can be cleaned with mild detergent and warm water, no bleach or harsh cleaners/abrasives.

MAINTENANCE

This product requires regular maintenance. Periodically check the Rocker for wear, damage, or missing components. Should any parts be missing or damaged, the Rocker must not, under any circumstances, be used. Please call customer service for assistance.

For More Information

For USA customers :

If you have any questions or comments about this product, or are missing any of the parts, please do not return this product to the store. Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com



www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601



www.chiccousa.com