




## 3-DIAL COMBINATION PADLOCK

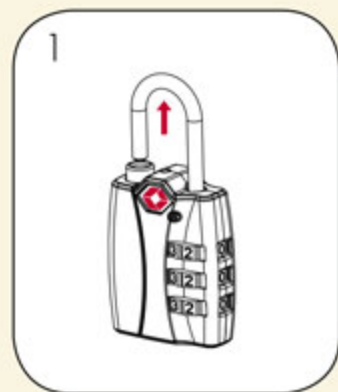


SET DIALS TO "0-0-0"  
AND PULL UP ON SHACKLE

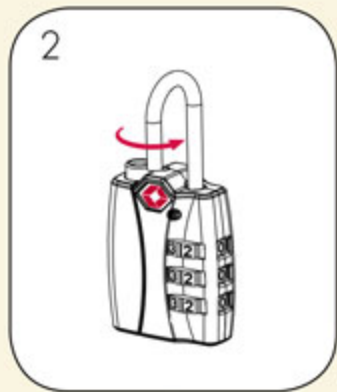


TURN SHACKLE 90°

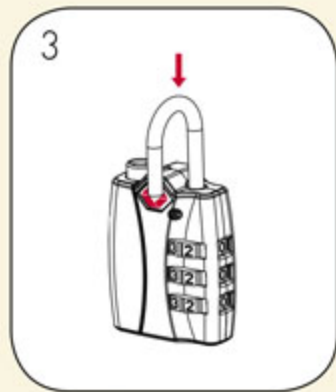


PUSH SHACKLE DOWN

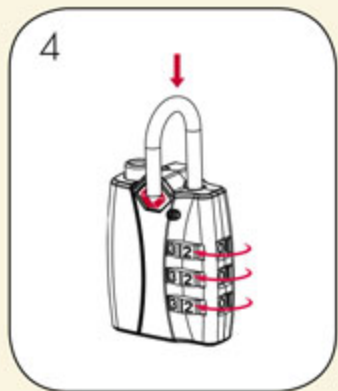

STILL PUSHING DOWN  
TURN DIALS TO DESIRED  
COMBINATION

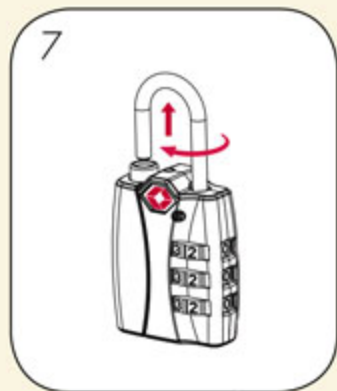

LIFT UP ON SHACKLE AND  
TURN BACK 90°

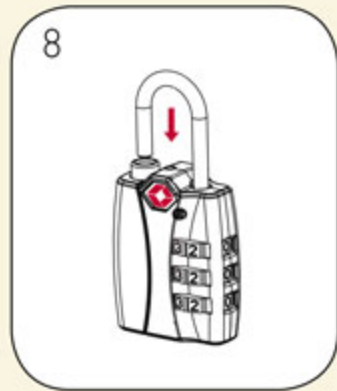

YOUR CODE IS NOW SET.